

Lucent Technologies
Bell Labs Innovations



DECT 12 cordless system

WT9001 cordless phone user's manual

Ref 21873A

January 1998

The WT9001 cordless phone

Before using the cordless phone

Charge (or recharge) the battery pack	7
Register the cordless phone	7
Check the quality of the radio link	7

First call

Call an extension	8
Call the attendant	8
Place an automatic callback (to a cordless phone only)	8
Enter into an existing call (to a cordless phone only)	8
Call any member of a group of extensions	8
Call an outside party	8
Use the DECT 12 directory (system feature)	9
Use your personal directory (telephone feature)	9
Redial the last number dialed (telephone feature)	9
Send a message to an outside party (ISDN service)	10
Leave a message for callers to your phone (ISDN service)	10
Answer a call	11
Play a voice message	11
Answer a paging announcement	11

With a call in progress

Place a call on hold (ISDN service)	12
Return to the call on hold (ISDN service)	12
Speak to two parties in turn (ISDN service)	12
Set up a three-party conference call (ISDN service)	12
Transfer a call (ISDN service)	12
Store a telephone number in temporary memory (system feature)	13
Use the number stored in temporary memory	13
View and delete the number stored in temporary memory	13
Copy the number stored in temporary memory to the DECT 12 directory	14
Microphone muting (telephone feature)	14
Adjust the receiver volume (telephone feature)	14
Be notified of a waiting call (ISDN service)	14
To answer the new call	14
To refuse the new call	15

Customizing the WT9001

- Select a personalized ring signal (telephone feature) 16
- Adjust the ringer volume (telephone feature) 16
- Activate (deactivate) the audible button stroke (telephone feature) 17
- Storing numbers in the DECT 12 directory (system feature) 17
 - Modifying numbers stored in the DECT 12 directory 18
 - Deleting numbers stored in the DECT 12 directory 18
- Storing numbers in your personal directory (telephone feature) 19
 - Modifying numbers stored in your personal directory 19
 - Deleting numbers stored in your personal directory 20
 - Viewing numbers stored in your personal directory 20
- Select a display language (system feature) 20
- Send your identification number to yours callers (ISDN service) 21
- Redirect your calls when the radio connection is unsuccessful (system feature) 21
- Redirect your calls to an extension number (system feature) 21
 - Select the call forward type 22
 - Specify the call forward operating mode 23
 - Specify the time for a delayed call forward 24
 - Specify the forwarded-to extension number 25
 - Deactivate all the redirections 25
- View your call charges (system feature) 26
- Allow/Prevent specific trunk calls being received at your phone (system feature) 26
 - Administer the call filters 27
 - Allow only specific trunk calls being received at your phone 27
 - Prevent specific trunk calls being received at your phone 28
 - Deactivate the call filters 28
- View the list of the last 10 unanswered trunk calls (system feature) 29
 - Use the list of the last 10 unanswered trunk calls 29
 - Store a number from the list in the DECT 12 directory 29
- Lock your cordless phone keypad (telephone feature) 30
- Protect your phone against unauthorized use 30
- Reset your cordless phone 31
 - Delete customized parameters using the telephone menu 31
 - Delete customized parameters using the system menu 32

Additional system features

- Change the system PIN (system feature) 33
- Change your own class of restriction (system feature) 34
- Enable intrusion (system feature) 34


System features available at the administrator phone

Set the date and time (system feature) 35
Delete the cordless phone PINs (system feature) 36
Change all the cordless phone CORs (system feature) 37
Change a cordless phone COR (system feature) 38
Change from day to night incoming call destination (system feature) 39
Administer call charges (system feature) 41
 View the call charges for all the cordless phones 41
 Reset counters for all the cordless phones 42

Additional information

Care of your cordless phone 43
Technical data 43
CE marking 43
In case of difficulty 43

The WT9001 cordless phone

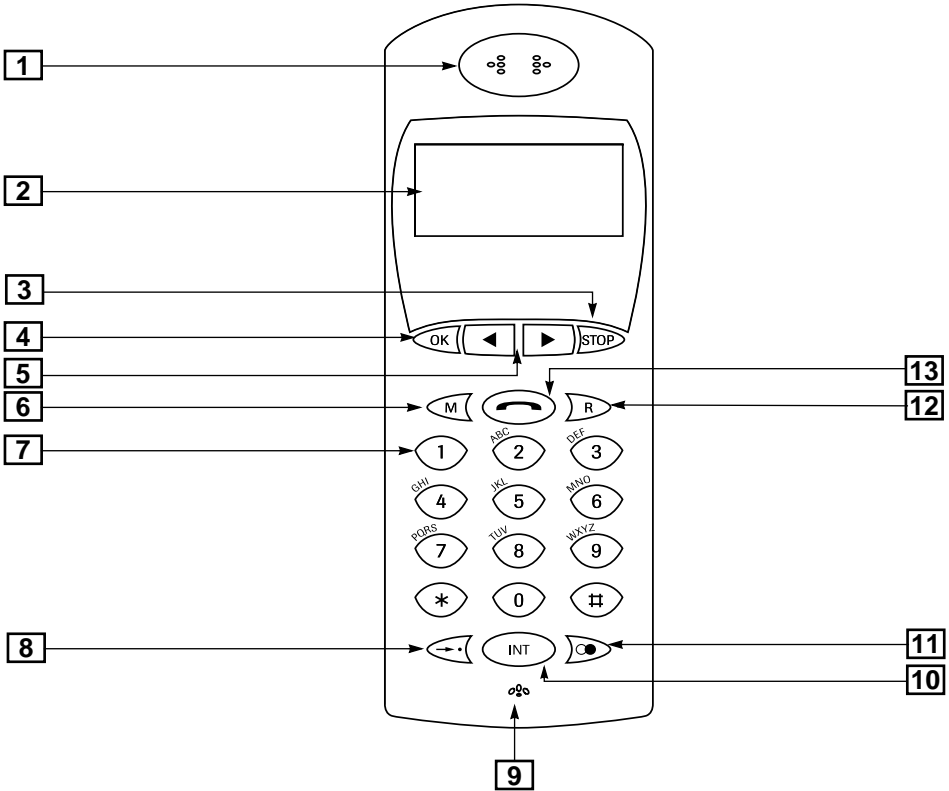

- 1. **Earpiece**
- 2. **Interactive display:** allows selection and access to features and provides message information.
The first line shows the available features.
The second line shows information.
- 3. **STOP button:** used to quit a menu and get back to the previous one.
- 4. **OK button:** used to confirm the displayed feature or setting.
- 5. **Previous & Next buttons:** used to go back and forth between the previous and next features (or characters in the alphabetical mode).
- 6. **Menu button:** used to enter/leave the Telephone or System menu.
 - When the cordless phone is **idle**, the available Telephone features are: EDIT NAME/NR, NEW SYSTEM, TEL.-LOCK ON/OFF, VOLUME/MELODY and SET UP
 - When the cordless phone is **off-hook**, the available System features are: DISP/DIAL EXT., CALL FORWARD, MESSAGES, PROGRAM AD, TRANSFER TEL.NO., SET-UP MENU, CALL FILTER, CALL VARIANT.

The WT9001 cordless phone

7. Dial pad:

- used to dial telephone or extension numbers in numeric mode,
- used to enter letters and punctuation marks in alphabetical mode.

Table showing the available characters

Key	TELEPHONE MENU	SYSTEM MENU
1	1üéääääâêëèïîïÄÅÉæÆÖöðûüÜ	. : ? 1
2		ABC2
3		DEF3
4		GHI4
5		JKL5
6		MNO6
7		PQRS7
8		TUV8
9		WXYZ9
0	0 ! " & () + , - . : ; < > = ?	+ - ! 0

Use the Previous button to delete a character.

Use the Next button to enter a space.

Use the Next button to move the cursor to the right.

8. **AD button:** used to access your personal directory.

9. Microphone

10. **INT button:** used to measure the quality of the radio link.

11. **Redial button:** used to automatically redial the last outside number you dialed.

12. **R button:** used to place a call on hold, return to the held call and speak to two parties in turn.

13. ON/OFF HOOK button

Before using the cordless phone

You must perform the following operations before attempting to use the WT9001 cordless phone.

Charge (or recharge) the battery pack

The WT9001 cordless phone is supplied with a rechargeable battery pack and charger unit.

To charge the battery pack:

- Remove the back cover of the cordless phone.
- Insert the supplied battery pack in its housing as indicated.
- Replace the back cover and snap firmly into place.
- Place the cordless phone on the charger unit, with the keypad facing you.
- Plug the charger unit in a 220/230V-50Hz wall socket.
- The battery pack should remain at least twelve hours on the charger unit. When fully charged, the message “100%” is displayed.

A rectangular LCD display showing the text "No system" on the left and "100%" on the right.

Register the cordless phone

To register the cordless phone, see the Installation manual.

Check the quality of the radio link

The WT9001 cordless phone automatically measures the quality of the radio link. To make sure that you are within range of a base station and that your cordless phone is successfully registered, you may view the quality of the radio link as follows:

- Press the **Menu** button.
- Press the **INT** button.

A rectangular LCD display showing the text "SYSTEMA KE1 KE2" on the top line and "RSSI: 98 88 37" on the bottom line.

Note: The quality varies from 00 (very poor) to 99 (excellent).

First call

Call an extension

- Press the **ON/OFF HOOK** button.
- Dial the extension number.

Call the attendant

- Press the **ON/OFF HOOK** button.
- Dial the Attendant access code (**9**).

Place an automatic callback (to a cordless phone only)

If the extension you are calling is busy or unanswered, you may automatically place another call to the extension.

- When you hear the busy tone, press the **Previous** or **Next** button to select the «Callback» feature.

```
BOB  
>Callback
```

- Press the **OK** button to activate the feature.
- Press the **ON/OFF HOOK** button.

The «Callback» feature will send you a ring as soon as the previously busy extension is available.

Enter into an existing call (to a cordless phone only)

If the extension you are calling is busy, you may attempt to enter into the conversation. The attempt to intrude on the call is denied if the Intrusion is disabled at the extension you are calling.

- When you hear the busy tone, press the **Previous** or **Next** button to select the «Intrusion» feature.

```
BOB  
>Intrusion
```

- Press the **OK** button to activate the feature.

You are in a three-party conversation.

Call any member of a group of extensions

- Press the **ON/OFF HOOK** button.
- Dial the group (department) number (from **☎¹4500** to **☎4532**).

Call an outside party

- Press the **ON/OFF HOOK** button.
- Dial the dial-out code (**0**).
- Dial the outside telephone number.

1. **☎** represents the first digit that may have to be dialed.

First call

Use the DECT 12 directory (system feature)

To place a call to an outside party whose telephone number is stored in the DECT 12 directory, you may key in a name.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

PLEASE DIAL
>Note → MENU:
<Tel. System>

- Press the **Previous** or **Next** button to select the «DISP/DIAL EXT.» feature.
- Press the **OK** button then the **Previous** or **Next** button to view the entries one by one.

DISP/DIAL EXT.
ok A-Z INT <> → 00: AKETHO K
4716

or

Enter the first letter of the name then press the **Previous** or **Next** button to view the entries one by one.

00: AKETHO K
4716

- When the requested name is displayed, press the **OK** button to place the call.

Use your personal directory (telephone feature)

To place a call to an outside party whose telephone number is stored in your personal directory:

- Press the **ON/OFF HOOK** button.
- Press the **AD** button.
- Enter the appropriate AD number (from **001** to **021**) or press the **Previous** or **Next** button to view the entries one by one.
- When the requested name is displayed, press the **OK** button to place the call.

Redial the last number dialed (telephone feature)

Your cordless phone automatically stores the last three outside numbers you dialed.

When the outside number you are calling is busy or unanswered, you may continue to dial the number:

- Press the **Redial** button as many times as necessary to select the appropriate telephone number.
- Press the **ON/OFF HOOK** button when the appropriate number is displayed.

Note: You may also switch on your cordless phone first, then select the appropriate number by pressing the **Redial** button.

Send a message to an outside party (ISDN service)

When the outside number you are calling is busy or unanswered, you may send one of the following:

PLEASE CALL ME BACK SOON, PLEASE CALL BACK TOMORROW, I WILL CALL BACK LATER, I WILL CALL BACK TOMORROW or DATE FOR MEETING OK.

- Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «MESSAGES» feature.

MENU:
<Tel. System> → MESSAGES
ok ◁ ▷

- Press the **OK** button.
- Press the **Previous** or **Next** button to select the «SEND MESSAGE» feature.

LEAVE MESSAGE
ok ◁ ▷ → SEND MESSAGE
ok ◁ ▷

- Press the **OK** button twice to activate the feature.

SEND MESSAGE=OFF
On ◁ ▷ → SEND MESSAGE=ON
ok

- Press the **OK** button to confirm.
- Press the **Previous** or **Next** button to select the appropriate message.

SEND MESSAGE= ON
Off ◁ ▷ → PLEASE CALL BACK
More ◁ ▷

- Press the **OK** button to confirm.

Leave a message for callers to your phone (ISDN service)

To leave one of the following messages for your callers' attention:

HOLIDAY UNTIL --- or BACK AT ---.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

PLEASE DIAL
>List → MENU:
<Tel. System>

- Press the **Previous** or **Next** button to select the «MESSAGES» feature.
- Press the **OK** button.

MESSAGES
ok ◁ ▷ → LEAVE MESSAGE
ok ◁ ▷

- Press the **OK** button to activate the feature.
- Press the **Previous** or **Next** button to select the appropriate message.

STORE = ON
Off ◁ ▷ → HOLIDAY UNTIL
Date ◁ ▷

- Press the **OK** button.
- Enter the appropriate time or date.

---. ---.
0-9< → 15. 01.
ok <

- Press the **OK** button to store the time or date.
- Press the **ON/OFF HOOK** button.

First call

Answer a call

- Press the **ON/OFF HOOK** button or remove the cordless phone from the charger unit.

Note: When receiving a trunk call, the display shows either the calling party's name (if stored into the DECT 12 directory) or the calling party's number (caller identification sent by the network) or the message "TEL NO UNKNOWN".

Play a voice message

If your telephone system is equipped with a voice messaging system, your callers are able to record messages in your voice mailbox. To play the recorded messages:

- Press the **ON/OFF HOOK** button.
- Dial the Voice mail access code (**☎471** to **☎478**).

Answer a paging announcement

- Press the **ON/OFF HOOK** button.
- Dial the Answer-back access code (**☎60**).

Note: You have 2 minutes to answer a paging announcement.

With a call in progress

Place a call on hold (ISDN service)

You may place a call on hold anytime you have to interrupt the conversation to answer another call, place a new call or perform some other task. You have to place the call on hold before transferring it.

- Press the **R** button.

Return to the call on hold (ISDN service)

- Press the **R** button.

Speak to two parties in turn (ISDN service)

When you answer or place a new call while active on another, you may speak to the two parties in turn.

- Press the **R** button twice.

Set up a three-party conference call (ISDN service)

You may add a call you have placed on hold to another call you are connected to and thus establish a three-party conversation.

- Press the **R** button to place the current call on hold.
- Dial the dial-out code (**0**) if the new party is an outside party.
- Dial the telephone number of the new party and wait for an answer.
- Press the **Previous** or **Next** button to select the «Conf» feature.

```
0241534222  
>Conf
```

- Press the **OK** button to activate the feature.

To end a conference call:

- Press the **ON/OFF HOOK** button.

Transfer a call (ISDN service)

To send the present call from your phone to an extension or outside number:

- Press the **R** button to place the current call on hold.
- Dial the dial-out code (**0**) if the call is to be transferred to an outside number.
- Dial the number where the call is to be transferred and wait for an answer.
- Press the **Previous** or **Next** button to select the «Transfer» feature.

 
```
0241534222  
>Transfer
```

- Press the **OK** button to activate the feature.
- Press the **ON/OFF HOOK** button.


Store a telephone number in temporary memory (system feature)

While conversing, you may store your caller's telephone number in order to call him/her back later.

- Press the **Previous** or **Next** button to select the «Note» feature.
- Press the **OK** button.



 
- Press the **OK** button to activate the feature.
- Enter your caller's telephone number.




- Press the **OK** button to store the number.
- Press the **STOP** button.

Use the number stored in temporary memory

 - Press the **ON/OFF HOOK** button.
- Press the **Previous** or **Next** button to select the «Note» feature.
- Press the **OK** button.



 
- Press the **Previous** or **Next** button to select the «DIAL» feature.
- Press the **OK** button. The telephone number stored in the temporary memory is displayed.



- Press the **OK** button to place the call.

View and delete the number stored in temporary memory

 - Press the **ON/OFF HOOK** button.
- Press the **Previous** or **Next** button to select the «Note» feature.
- Press the **OK** button.



- Press the **Previous** or **Next** button to select the «READ AND DELETE» feature.
- Press the **OK** button. The telephone number stored in the temporary memory is displayed.



- Press the **OK** button to delete the number.
- Press the **ON/OFF HOOK** button.

With a call in progress

Copy the number stored in temporary memory to the DECT 12 directory

- Press the **ON/OFF HOOK** button.
- Press the **Previous** or **Next** button to select the «Note» feature.
- Press the **OK** button.

PLEASE DIAL
>Note → ENTER NOTEPAD
ok ok ◊

- Press the **Previous** or **Next** button to select the «TRANSFER TO AD» feature.
- Press the **OK** button to activate the feature.

TRANSFER TO AD
ok ◊ → 0241534233
Transfer

- Press the **OK** button to confirm the copy. A free AD number is displayed.
- Enter the appropriate name.

94: NAME ?
ok A-Z >< → 94: SCOTT
ok A-Z ><

- Press the **OK** button to store the entry.
- Press the **ON/OFF HOOK** button.

Microphone muting (telephone feature)

You may switch off the microphone in the cordless phone so the other person on the call cannot hear you.

- Press the **Menu** button.
- Press **0**.

To switch the microphone on again, repeat the above steps.

Adjust the receiver volume (telephone feature)

To increase the receiver volume:

- Press the **Menu** button.
- Press **#**.

VOLUME STANDARD → VOLUME HIGH

To lower the receiver volume, repeat the above steps.

Note: The factory setting is standard.

Be notified of a waiting call (ISDN service)

While connected to a party, you may be notified of a waiting call by a specific tone.

To answer the new call

 
4522
Accept

- Press the **OK** button to confirm. You are now connected to the second caller, while the first party is placed on hold.

With a call in progress

To refuse the new call

- Press the **Previous** or **Next** button to select the «Reject» feature.
- Press the **OK** button to confirm. You are still connected to the current call and your second caller hears the busy tone.




Customizing the WT9001

Select a personalized ring signal (telephone feature)

You may choose your own personalized ring signal for your cordless phone from ten different possibilities.

 - Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «VOLUME/MELODY» feature.



- Press the **OK** button twice.
- Press the **Previous** or **Next** button to select the appropriate pattern.



 
- Press the **OK** button.
- Press the **STOP** button twice.

Note: The different patterns are numbered from 01 to 10. The factory setting is pattern 02.

Adjust the ringer volume (telephone feature)

You may adjust the ringer volume for your cordless phone from seven different levels.

- Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «VOLUME/MELODY» feature.



- Press the **OK** button.
- Press the **Previous** or **Next** button to select the «VOLUME» feature.



- Press the **OK** button.
- Press the **Previous** or **Next** button to select the required level.



- Press the **OK** button.
- Press the **STOP** button twice.

Note: The different levels are numbered from 01 to 07. The factory setting is level 05.

Activate (deactivate) the audible button stroke (telephone feature)

- Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «SET UP» feature.

MENU: ok	→	SET UP ok
-------------	---	--------------

- Press the **OK** button.
- Press the **OK** button twice to activate the audible button stroke.

BEEP=ON Off	→	BEEP=OFF On
----------------	---	----------------

- Press the **STOP** button twice.

Storing numbers in the DECT 12 directory (system feature)

You may store up to a hundred names and numbers in the DECT 12 directory.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

PLEASE DIAL >List	→	MENU: <Tel. System>
----------------------	---	------------------------

- Press the **Previous** or **Next** button to select the «PROGRAM AD» feature.
- Press the **OK** button.

PROGRAM AD ok	→	PROGRAM INPUT ok 00-99
------------------	---	---------------------------

- Press the **OK** button. The first free abbreviated number is displayed.
- Press the **OK** button to confirm.

94: NO ENTRY ok 00-99	→	94: NAME ? ok A-Z ><
--------------------------	---	-------------------------

- Enter the name you want to store.
- Press the **OK** button.

94: SCOTT ok A-Z ><	→	94: TEL. NO. ? ok 0-9<
------------------------	---	---------------------------

- Enter the associated telephone number you want to store.
- Press the **OK** button.

94: 0241534222 ok 0-9<	→	PROGRAM INPUT ok 00-99
---------------------------	---	---------------------------

- Repeat the above steps if you wish to store another number or press the **ON/OFF HOOK** button.

Modifying numbers stored in the DECT 12 directory

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL          MENU:
>List                <Tel.   System>
```

- Press the **Previous** or **Next** button to select the «PROGRAM AD» feature.
- Press the **OK** button.

```
PROGRAM AD          PROGRAM INPUT
ok                  ok  00-99
```

- Enter the abbreviated number (from **00** to **99**).
- Press the **OK** button to confirm.

```
94: SCOTT          94: SCOTT
ok  00-99         ok  A-Z ><
```

- Press the **Previous** button to delete the name previously stored.
- Enter the new name you want to store.
- Press the **OK** button.

```
94: SMITH          94: 0241534222
ok  A-Z ><        ok  0-9<
```

- Press the **Previous** button to delete the number previously stored.
- Enter the new telephone number you want to store.
- Press the **OK** button.

```
94: 0241534222    PROGRAM INPUT
ok  0-9<          ok  00-99
```

- Repeat the above steps if you wish to modify another number or press the **ON/OFF HOOK** button.

Deleting numbers stored in the DECT 12 directory

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL          MENU:
>List                <Tel.   System>
```

- Press the **Previous** or **Next** button to select the «PROGRAM AD» feature.
- Press the **OK** button.

```
PROGRAM AD          PROGRAM INPUT
ok                  ok  00-99
```

- Press the **Previous** or **Next** button to select the «DELETE INPUT» feature.
- Press the **OK** button.

```
DELETE INPUT        00: SCOTT
ok  00-99         Delete
```

- Enter the abbreviated number (from **00** to **99**) or press the **Previous** or **Next** button to view the abbreviated numbers one by one.
- Press the **OK** button to delete the entry previously stored.
- Repeat the above steps if you wish to delete another entry or press the **ON/OFF HOOK** button.

Storing numbers in your personal directory (telephone feature)

You may store up to twenty names and numbers in the your personal AD memories.

- Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «EDIT NAME/NR» feature.

```
MENU:
ok      <>
```



```
EDIT NAME/NR
ok      <>
```

- Press the **OK** button twice.
- Enter the abbreviated number (from **01** to **21**) or press the **Previous** or **Next** button to view the abbreviated numbers one by one.

```
01: -----
ok 01-21 <>
```



```
09: -----
ok 01-21 <>
```

- Press the **OK** button.
- Enter the name you want to store.

```
09: NAME?
ok  A-Z ><
```



```
09: SCOTT
ok  A-Z ><
```

- Press the **OK** button.
- Enter the associated telephone number you want to store.

```
TEL. -NR. ?
ok 0-9 ->*<
```



```
0241534222
ok 0-9 ->*<
```

- Press the **OK** button.
- Press the **STOP** button twice.

Modifying numbers stored in your personal directory

- Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «EDIT NAME/NR» feature.

```
MENU:
ok      <>
```



```
EDIT NAME/NR
ok      <>
```

- Press the **OK** button twice.
- Enter the abbreviated number (from **01** to **21**) or press the **Previous** or **Next** button to view the abbreviated numbers one by one.

```
01: -----
ok 01-21 <>
```



```
09: -----
ok 01-21 <>
```

- Press the **OK** button.
- Press the **Previous** button to delete the name previously stored.
- Enter the new name you want to store.

```
09: SCOTT
ok  A-Z ><
```



```
09: SMITH
ok  A-Z ><
```

- Press the **OK** button.
- Press the **Previous** button to delete the number previously stored.
- Enter the new telephone number you want to store.

```
0241534222
ok 0-9 ->*<
```



```
0241534233
ok 0-9 ->*<
```

- Press the **OK** button.
- Press the **STOP** button twice.

Deleting numbers stored in your personal directory

- Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «EDIT NAME/NR» feature.

```
MENU:
ok      <> → EDIT NAME/NR
ok      <>
```

- Press the **OK** button.
- Press the **Previous** or **Next** button to select the «DEL. NAME/NR»

```
PROG. NAME/NR.
ok      <> → DEL. NAME/NR
ok      <>
```

- Press the **OK** button.
- Enter the abbreviated number (from **01** to **21**) or press the **Previous** or **Next** button to view the abbreviated numbers one by one.
- Press the **OK** button to delete the entry.

```
01: SMITH
ok 01-21 <> → 09: SCOTT
ok 01-21 <>
```

- Press the **STOP** button.

Viewing numbers stored in your personal directory

- Press the **AD** button.
- Enter the abbreviated number (from **01** to **21**) or press the **Previous** or **Next** button to view the abbreviated numbers one by one.
- Press the **OK** button to view the telephone number stored.
- Press the **STOP** button.

Select a display language (system feature)

Available languages are:

- Telephone menu: English
- System menu: English, French.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List → MENU:
      <Tel.  System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU
ok <> → REGISTER HANDSET
ok <>
```

- Press the **Previous** or **Next** button to select the «LANGUAGE» feature.
- Press the **OK** button.

```
LANGUAGE: F
GB <> → LANGUAGE: GB
ok
```

- Press the **OK** button to confirm.
- Press the **ON/OFF HOOK** button.

Send your identification number to yours callers (ISDN service)

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List           →  MENU:
                  <Tel.   System>
```

- Press the **Previous** or **Next** button to select the «TRANSFER TEL.NO.» feature.
- Press the **OK** button.

```
TRANSFER TEL. NO.
ok                ⇄  TEL. NO. =COMPLETE
                    ok                ⇄
```

- Press the **Previous** or **Next** button to select the appropriate setting.

Note: The available settings are COMPLETE, FIXED and BARRED.

- Press the **OK** button to confirm.

```
TEL. NO. =FIXED
ok                ⇄  TRANSFER TEL. NO.
                    ok                ⇄
```

- Press the **ON/OFF HOOK** button.

Redirect your calls when the radio connection is unsuccessful (system feature)

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List           →  MENU:
                  <Tel.   System>
```

- Press the **Previous** or **Next** button to select the «CALL FORWARD» feature.
- Press the **OK** button.

```
CALL FORWARD
ok                ⇄  FWD OFF-PREMISES
                    ok                ⇄
```

- Press the **Previous** or **Next** button to select the «UNREACHABLE» feature.
- Press the **OK** button.

```
UNREACHABLE
ok                ⇄  TEL. NO. ?
                    ok  0-9<
```

- Enter the number where the calls will be sent.
- Press the **OK** button.

```
4222
ok  0-9<         →  CALL FORWARD=OFF
                    On
```

- Press the **OK** button twice to activate the redirection and store the settings.

```
CALL FORWARD = ON
ok                →  UNREACHABLE
                    ok                ⇄
```

- Press the **ON/OFF HOOK** button.

Redirect your calls to an extension number (system feature)

When you will be away from our desk for a while, you may redirect your calls to an extension number.

Select the call forward type

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List
```



```
MENU:
<Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL FORWARD» feature.
- Press the **OK** button.

```
CALL FORWARD
ok
```



```
FWD OFF-PREMISES
ok
```

- Press the **Previous** or **Next** button to select the «LOCAL FORWARD» feature.
- Press the **OK** button.

```
LOCAL FORWARD
ok
```



```
CALL FWD ON/OFF
ok
```

- Press the **Previous** or **Next** button to select the «CALL TYPES» feature.
- Press the **OK** button.

```
CALL TYPES
ok
```



```
INTER. CALLS=ON
Of f
```

- Press the **Previous** or **Next** button to select the appropriate call type (internal, external, direct calls).
- Press the **OK** button.

```
EXTER. CALLS=OFF
On
```



```
EXTER. CALLS=ON
ok
```

- Press the **OK** button to store the settings.
- Press the **ON/OFF HOOK** button.

Specify the call forward operating mode

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List
```



```
MENU:
<Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL FORWARD» feature.
- Press the **OK** button.

```
CALL FORWARD
ok
```



```
FWD OFF-PREMISES
ok
```

- Press the **Previous** or **Next** button to select the «LOCAL FORWARD» feature.
- Press the **OK** button.

```
LOCAL FORWARD
ok
```



```
CALL FWD ON/OFF
ok
```

- Press the **Previous** or **Next** button to select the «OPERATING MODE» feature.
- Press the **OK** button.

```
OPERATING MODE
ok
```



```
IMMEDIATE = ON
Of f
```

- Press the **Previous** or **Next** button to select the appropriate operating mode (immediate, delayed, when busy).
- Press the **OK** button.

```
WHEN BUSY= OFF
On
```



```
WHEN BUSY= ON
ok
```

- Press the **OK** button to store the settings.
- Press the **ON/OFF HOOK** button.

Specify the time for a delayed call forward

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL  
>List
```



```
MENU:  
<Tel. System>
```

- Press the **Previous** or **Next** button to select the «CALL FORWARD» feature.
- Press the **OK** button.

```
CALL FORWARD  
ok
```



```
FWD OFF-PREMISES  
ok
```

- Press the **Previous** or **Next** button to select the «LOCAL FORWARD» feature.
- Press the **OK** button.

```
LOCAL FORWARD  
ok
```



```
CALL FWD ON/OFF  
ok
```

- Press the **Previous** or **Next** button to select the «DELAYED» feature.
- Press the **OK** button.

```
DELAYED  
ok
```



```
TIME = 30SEC  
ok 0-9<
```

- Press the **Previous** button to delete the previous entry.
- Enter the delay in seconds (from **1** to **180**).

```
TIME = 0SEC  
ok 0-9<
```



```
TIME = 40SEC  
ok 0-9<
```

- Press the **OK** button to store the setting.
- Press the **ON/OFF HOOK** button.

Specify the forwarded-to extension number

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL      MENU:
>List           <Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL FORWARD» feature.
- Press the **OK** button.

```
CALL FORWARD    FWD OFF-PREMISES
ok              ok
```

- Press the **Previous** or **Next** button to select the «LOCAL FORWARD» feature.
- Press the **OK** button.

```
LOCAL FORWARD   CALL FWD ON/OFF
ok              ok
```

- Press the **OK** button.
- Press the **Previous** button to delete the previous entry.

```
4772            TEL. NO. ?
ok 0-9<        ok 0-9<
```

- Enter the number where the calls will be sent.
- Press the **OK** button.

```
4773            CALL FORWARD=OFF
ok 0-9<         On
```

- Press the **OK** button twice to activate the redirection and store the settings.

```
CALL FORWARD = ON  CALL FWD ON/OFF
ok                 ok
```

- Press the **ON/OFF HOOK** button.

Deactivate all the redirections

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL      MENU:
>List           <Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL FORWARD» feature.
- Press the **OK** button.

```
CALL FORWARD    FWD OFF-PREMISES
ok              ok
```

- Press the **Previous** or **Next** button to select the «ALL FWD OFF» feature.
- Press the **OK** button to confirm the selection.

```
ALL FWD OFF     ALL FWD OFF
ok              Confirm
```

- Press the **OK** button to deactivate all the redirections.
- Press the **ON/OFF HOOK** button.

View your call charges (system feature)

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

PLEASE DIAL
>List → MENU:
<Tel. System>

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

SET-UP MENU
ok ◁ ▷ → REGISTER HANDSET
ok ◁ ▷

- Press the **Previous** or **Next** button to select the «CHARGES» feature.
- Press the **OK** button.

CHARGES
ok ◁ ▷ → COUNTER: OFFICE
ok ◁ ▷

- Press the **Previous** or **Next** button to select the counter «OFFICE» or «PRIVATE».
- Press the **OK** button.
- Press the **OK** button to select «Last call» (last call charges) or «Total» (all call charges).

4778: 10, 00 USD
Total → 4778: 5, 00 USD
Last call

- Press the **ON/OFF HOOK** button.

Allow/Prevent specific trunk calls being received at your phone (system feature)

There are three different call filters (F1 to F3) which are administrable. Complete or partial telephone numbers are stored into the call filters. Call filters are used to allow or prevent specific trunk calls being received at your phone.

Administer the call filters

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List
```



```
MENU:
<Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL FILTER» feature.
- Press the **OK** button.

```
CALL FILTER
ok
```



```
CALL FILTER= OFF
On
```

- Press the **Previous** or **Next** button to select the «PROG CALL FILTER» feature.
- Press the **OK** button.

```
PROG CALL FILTER
ok
```



```
F1:
Change
```

- Press the **Previous** or **Next** button to select the appropriate filter.
- Press the **OK** button.

```
F2:
Change
```



```
F2: TEL. NO. ?
ok 0-9<
```

- Enter complete or partial telephone number (up to 16 digits).

Note: Use the Previous button to delete a character.

- Press the **OK** button to store the settings.

```
F2: 02
ok 0-9<
```



```
F2: 02
Change
```

- Press the **ON/OFF HOOK** button.

To administer another call filter, repeat the above steps .

Allow only specific trunk calls being received at your phone

You wish to receive only the calls from the outside parties whose telephone numbers are stored into the call filters.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List
```



```
MENU:
<Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL FILTER» feature.
- Press the **OK** button.

```
CALL FILTER
ok
```



```
CALL FILTER= OFF
On
```

- Press the **OK** button twice to activate the call filters.
- Press the **Previous** or **Next** button to select the «F=PERMIT CALLS» feature.

```
F=BAR CALLS
ok
```



```
F=PERMIT CALLS
ok
```

- Press the **OK** button.

```
CALL FILTER= ON
Off
```

- Press the **ON/OFF HOOK** button.

Prevent specific trunk calls being received at your phone

You do not wish to receive any call from the outside parties whose telephone numbers are stored into the call filters.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL          MENU:
>List                <Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL FILTER» feature.
- Press the **OK** button.

```
CALL FILTER          CALL FILTER= OFF
ok                   On
```

- Press the **OK** button twice to activate the call filters.
- Press the **Previous** or **Next** button to select the «F=BAR CALLS» feature.

```
F=PERMIT CALLS      F=BAR CALLS
ok                   ok
```

- Press the **OK** button.

```
CALL FILTER= ON
Off
```

- Press the **ON/OFF HOOK** button.

Deactivate the call filters

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL          MENU:
>List                <Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL FILTER» feature.
- Press the **OK** button.

```
CALL FILTER          CALL FILTER= ON
ok                   non
```

- Press the **OK** button twice to deactivate the call filters.

```
CALL FILTER= OFF
ok
```

- Press the **ON/OFF HOOK** button.

View the list of the last 10 unanswered trunk calls (system feature)

Note: If telephone numbers are stored in the list, "CALL LIST" will be displayed at your cordless phone in idle state.

- Press the **ON/OFF HOOK** button.
- Press the **OK** button.

```
PLEASE DIAL
>List
→ DIAL
ok
```

- Press the **Previous** or **Next** button to select the «READ AND DELETE» feature.
- Press the **OK** button.

```
READ AND DELETE
ok
→ 1: 4820
More
```

- Press the **Previous** or **Next** button to select the appropriate number.
- Press the **OK** button twice to delete the number.

Use the list of the last 10 unanswered trunk calls

- Press the **ON/OFF HOOK** button.
- Press the **OK** button.

```
PLEASE DIAL
>List
→ DIAL
ok
```

- Press the **OK** button.
- Press the **Previous** or **Next** button to select the appropriate number.

```
1: 4820
More
→ 2: 4805
More
```

- Press the **OK** button twice to confirm and place the call.

Store a number from the list in the DECT 12 directory

- Press the **ON/OFF HOOK** button.
- Press the **OK** button.

```
PLEASE DIAL
>List
→ DIAL
ok
```

- Press the **Previous** or **Next** button to select the «TRANSFER TO AD» feature.
- Press the **OK** button.

```
TRANSFER TO AD
ok
→ 1: 4820
Transfer
```

- Press the **Previous** or **Next** button to select the appropriate number.
- Press the **OK** button to confirm. The first available AD number is displayed.

 
```
2: 4805
Transfer
→ 94: NAME ?
ok A-Z ><
```

- Enter the appropriate name.
- Press the **OK** button to store the entry.
- Press the **ON/OFF HOOK** button.

Lock your cordless phone keypad (telephone feature)

You may lock your cordless phone keypad to prevent any unintentional use.

- Press the **Menu** button.
- Press the * button.



To unlock the keypad, repeat the above steps.

Note: The keypad returns to the 'unlock' condition when the following occurs:

- the cordless phone is placed on the charger unit,
- the battery pack is removed or replaced.

 
Protect your phone against unauthorized use

First procedure (telephone feature):

- Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «TEL.-LOCK ON/OFF» feature.



- Press the **OK** button.
- Enter the new PIN (Personal Identification Number).
- Reenter the PIN.



- Press the **OK** button to protect your phone against unauthorized use.



To unlock the phone, repeat the above steps.

Second procedure (system feature):

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List           →  MENU:
                  <Tel.  System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU
ok             ⇄  →  RESET
                  ok             ⇄
```

- Press the **Previous** or **Next** button to select the «TELEPHONE LOCK» feature.
- Press the **OK** button.

```
TELEPHONE LOCK
ok             ⇄  →  LOCK: PIN?
                  -----
```

- Enter the new PIN (Personal Identification Number).
- Press the **OK** button to confirm.

```
SET LOCK
ok             ⇄  →  TEL. ENABLED
                  ok             ⇄
```

- Press the **Previous** or **Next** button to select the required lock (prog disabled, emergency only, babyphone only).

```
PROG DISABLED
```

- Press the **OK** button to confirm.
- Press the **ON/OFF HOOK** button.

To unlock your cordless phone, select the «TEL. ENABLED» feature.

Reset your cordless phone

This operation will restore the factory settings and delete all the numbers stored in the memories.

Warning: This operation is irreversible.

Delete customized parameters using the telephone menu

- Press the **Menu** button.
- Press the **Previous** or **Next** button to select the «SET UP» feature.

```
MENU:
ok             ⇄  →  SET UP
                  ok             ⇄
```

- Press the **OK** button.
- Press the **Previous** or **Next** button to select the «RESET» feature.

```
BEEP=ON
Off           ⇄  →  RESET
                  ok             ⇄
```

- Press the **OK** button.

```
RESET?
ok
```

- Press the **OK** button to confirm.

Delete customized parameters using the system menu

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List
```



```
MENU:
<Tel.  System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU
ok
```



```
REGISTER HANDSET
ok
```

- Press the **Previous** or **Next** button to select the «RESET» feature.
- Press the **OK** button.

```
RESET
ok
```



```
RESET: PIN?
-----
```

- Enter your PIN (personal identification number).

```
RESET ALL
ok
```

- Press the **OK** button to confirm.
- Press the **ON/OFF HOOK** button.

Additional system features

Change the system PIN (system feature)

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List
```



```
MENU:
<Tel.  System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU
ok
```



```
REGISTER HANDSET
ok
```

- Press the **Previous** or **Next** button to select the «CHANGE PIN» feature.
- Press the **OK** button.

```
CHANGE PIN
ok
```



```
OLD PIN ?
-----
```

- Enter the current system PIN (personal identification number).
- Enter the new system PIN (4 digits).
- Reenter the new system PIN to confirm.

```
NEW PIN ?
-----
```



```
REPEAT PIN
-----
```

- Press the **ON/OFF HOOK** button.

Change your own class of restriction (system feature)

Among the five different classes of restriction, two of them have been assigned to your cordless phone by the system manager. You may switch between the “enhanced” (1) and the “standard” (2) COR whenever required and vice versa.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL          MENU:
>List                <Tel.   System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU         REGISTER HANDSET
ok                  ok
```

- Press the **Previous** or **Next** button to select the «COS CHANGEOVER» feature.
- Press the **OK** button.

```
COS CHANGEOVER     CHANGEOVER: PIN?
ok                  -----
```

- Enter your own PIN.
- Press the **OK** button. Your current COR is displayed.

```
OWN TELEPHONE      CLASS OF SERV 1
ok                  COS 2
```

- Press the **OK** button twice to change your COR.

```
CLASS OF SERV 2   OWN TELEPHONE
ok                  ok
```

- Press the **ON/OFF HOOK** button.

Enable intrusion (system feature)

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL          MENU:
>List                <Tel.   System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU         REGISTER HANDSET
ok                  ok
```

- Press the **Previous** or **Next** button to select the «COB/INTR=ENAB» feature.
- Press the **OK** button.

```
COB/INTR = ENAB    COB/INTR = DISAB
Disable            ok
```

- Press the **OK** button to confirm.
- Press the **ON/OFF HOOK** button.

System features available at the administrator phone

Set the date and time (system feature)

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List           →  MENU:
                  <Tel.  System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU    →  REGISTER HANDSET
ok             ok
```

- Press the **Previous** or **Next** button to select the «SET TIME/DATE» feature.
- Press the **OK** button.

```
SET TIME/DATE  →  SET TIME
ok             ok
```

- Press the **OK** button.
- Press the **Previous** button to delete the previous entry.

```
16:11         →  --:--
ok <          0-9<
```

- Enter the time (from 00:00 to 23:59).
- Press the **OK** button.

```
12:19         →  SET TIME
ok <          ok
```

- Press the **Previous** or **Next** button to select the «SET DATE» feature.
- Press the **OK** button.

```
SET DATE      →  DATE 03.01.97
ok           ok <
```

- Press the **Previous** button to delete the previous entry.
- Enter the date (dd, mm, yy).

```
DATE --. --. -- →  DATE 16.01.98
0-9<           ok <
```

- Press the **OK** button.
- Press the **ON/OFF HOOK** button.

Delete the cordless phone PINs (system feature)

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

PLEASE DIAL >List	➔	MENU: <Tel. System>
----------------------	---	------------------------

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

SET-UP MENU ok ◁▷	➔	REGISTER HANDSET ok ◁▷
----------------------	---	---------------------------

- Press the **Previous** or **Next** button to select the «CHANGE PIN» feature.
- Press the **OK** button.

CHANGE PIN ok ◁▷	➔	OLD PIN ? ----- ◁▷
---------------------	---	-----------------------

- Press the **Previous** or **Next** button to select the «DELETE PIN» feature.
- Enter your own PIN.

DELETE PIN: PIN? ----- ◁▷	➔	TEL. NO. ? ok 0-9<
------------------------------	---	-----------------------

- Enter the appropriate cordless phone extension number.
- Press the **OK** button.

4522 ok 0-9<	➔	4522 Delete
-----------------	---	----------------

- Press the **OK** button to delete the associated PIN.
- Press the **ON/OFF HOOK** button.

Change all the cordless phone CORs (system feature)

Among the five different classes of restriction, two of them have been assigned to the cordless phones by the system manager. You may switch between the “enhanced” (1) and the “standard” (2) COR whenever required and vice versa.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

PLEASE DIAL
>List

MENU:
<Tel. System>

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

SET-UP MENU
ok

REGISTER HANDSET
ok

- Press the **Previous** or **Next** button to select the «COS CHANGEOVER» feature.
- Press the **OK** button.

COS CHANGEOVER
ok

CHANGEOVER: PIN?

- Enter your own PIN.
- Press the **Previous** or **Next** button to select the «ALL TELEPHONES» feature.

OWN TELEPHONE
ok

ALL TELEPHONES
ok

- Press the **OK** button.
- Press the **Previous** or **Next** button to select the COR (class of restriction).

CLASS OF SERV 1 ?
ok

CLASS OF SERV 2 ?
ok

- Press the **OK** button twice to confirm.
- Press the **ON/OFF HOOK** button.

Change a cordless phone COR (system feature)

Among the five different classes of restriction, two of them have been assigned to the cordless phones by the system manager. You may switch between the “enhanced” (1) and the “standard” (2) COR whenever required and vice versa.

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL          → MENU:
>List                <Tel. System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU        → REGISTER HANDSET
ok                 ok
```

- Press the **Previous** or **Next** button to select the «COS CHANGEOVER» feature.
- Press the **OK** button.

```
COS CHANGEOVER    → CHANGEOVER: PIN?
ok                 -----
```

- Enter your own PIN.
- Press the **Previous** or **Next** button to select the «OTHER TELEPHONE» feature.

```
OWN TELEPHONE     → OTHER TELEPHONE
ok                 ok
```

- Press the **OK** button.
- Enter the appropriate cordless phone extension number.

```
TEL. NO. ?       → 4522
ok 0-9<         ok 0-9<
```

- Press the **OK** button. The cordless phone COR is displayed.
- Press the **OK** button to change the COR.

```
CLASS OF SERV 2  → CLASS OF SERV 1
COS 1
```

- Press the **OK** button to confirm.
- Press the **ON/OFF HOOK** button.

Change from day to night incoming call destination (system feature)

This can be done in two ways: manually and automatically.

Manually

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

PLEASE DIAL
>List → MENU:
<Tel. System>

- Press the **Previous** or **Next** button to select the «CALL VARIANT» feature.
- Press the **OK** button.

CALL VARIANT
ok ◊ → MSN 4820
ok ◊

- Press the **Previous** or **Next** button to select the appropriate number.
- Press the **OK** button to confirm the selection.

MSN 4818
ok ◊ → VARIANT 1
Var 2 ◊

- Press the **OK** button to change from day to night incoming call destination.
- Press the **OK** button to confirm.

VARIANT 2
ok → VARIANT 2
Var 1 ◊

- Press the **ON/OFF HOOK** button.

System features available at the administrator phone

Automatically

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List
```



```
MENU:
<Tel.  System>
```

- Press the **Previous** or **Next** button to select the «CALL VARIANT» feature.
- Press the **OK** button.

```
CALL VARIANT
ok <>
```



```
MSN 4820
ok <>
```

- Press the **Previous** or **Next** button to select the appropriate number.
- Press the **OK** button to confirm the selection.

```
MSN 4818
ok <>
```



```
VARIANT 1
Var 2 <>
```

- Press the **Previous** or **Next** button to select the «VAR1/VAR2 SWITCH» feature.
- Press the **OK** button.

```
VAR1/VAR2 SWITCH
ok <>
```



```
1/2 AT 12: 33
ok <
```

- Press the **Previous** button to delete the previous entry.
- Enter the time for changing from day to night incoming call destination.

```
1/2 AT --: --
0-9<
```



```
1/2 AT 20: 00
ok <
```

- Press the **OK** button to confirm.
- Press the **Previous** or **Next** button to select the «VAR2/VAR1 SWITCH» feature.

```
VAR1/VAR2 SWITCH
ok <>
```



```
VAR2/VAR1 SWITCH
ok <>
```

- Press the **OK** button.
- Press the **Previous** button to delete the previous entry.

```
2/1 AT 14: 00
ok <
```



```
2/1 AT --: --
0-9<
```

- Enter the time for changing from night to day incoming call destination.
- Press the **OK** button to confirm.

```
2/1 AT 08: 00
ok <
```



```
VAR2/VAR1 SWITCH
ok <>
```

- Press the **ON/OFF HOOK** button.

Administer call charges (system feature)

Notes:

- View the call charges and Reset counters are features that are available to the 'Call charges administrator'.
- Printing options are available when a printer is connected to the system V24 interface.

View the call charges for all the cordless phones

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL          → MENU:
>List                <Tel.   System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU        → REGISTER HANDSET
ok                 ok
```

- Press the **Previous** or **Next** button to select the «CHARGES» feature.
- Press the **OK** button.

```
CHARGES            → DISPLAY COUNTER
ok                 ok
```

- Press the **Previous** or **Next** button to select the «DISPLAY COUNTER» feature.
- Press the **OK** button.
- Press the **Previous** or **Next** button to select the «EXTENSIONS» feature.

```
OWN COUNTER        → EXTENSIONS
ok                 ok
```

- Press the **OK** button.
- Press the **Previous** or **Next** button to select the counter «OFFICE» or «PRIVATE».

```
COUNTER: OFFICE    → COUNTER: PRIVATE
ok                 ok
```

- Press the **OK** button.
- Enter the cordless extension number.

```
TEL. NO. ?        → 4522
ok 0-9<           ok 0-9<
```

- Press the **OK** button to confirm the number.
- Press the **OK** button to select «Last call» (last call charges) or «Total» (all call charges).

```
4522: 10, 00 USD  → 4522: 5, 00 USD
Total             Last call
```

- Press the **Previous** or **Next** button to select another cordless phone or press the **ON/OFF HOOK** button.

System features available at the administrator phone

Reset counters for all the cordless phones

- Press the **ON/OFF HOOK** button.
- Press the **Menu** button.

```
PLEASE DIAL
>List
```



```
MENU:
<Tel.  System>
```

- Press the **Previous** or **Next** button to select the «SET-UP MENU» feature.
- Press the **OK** button.

```
SET-UP MENU
ok
```



```
REGISTER HANDSET
ok
```

- Press the **Previous** or **Next** button to select the «CHARGES» feature.
- Press the **OK** button.

```
CHARGES
ok
```



```
DISPLAY COUNTER
ok
```

- Press the **Previous** or **Next** button to select the «DELETE COUNTER» feature.
- Press the **OK** button.

```
DELETE COUNTER
ok
```



```
DELETE: PIN?
-----
```

- Enter the PIN.
- Press the **Previous** or **Next** button to select the «EXTENSIONS» feature.

```
LINES
ok
```



```
EXTENSIONS
ok
```

- Press the **OK** button.
- Press the **Previous** or **Next** button to select the counter «OFFICE» or «PRIVATE».

```
COUNTER : OFFICE
ok
```



```
COUNTER : PRIVATE
ok
```

- Press the **OK** button.
- Enter the cordless extension number.

```
TEL. NO. ?
ok 0-9<
```



```
4522
ok 0-9<
```

- Press the **OK** button.
- Press the **OK** button to delete the counter.

```
4522: 10, 00 USD
Delete
```



```
4522: 0, 00 USD
```

- Press the **Previous** or **Next** button to select another cordless phone or press the **ON/OFF HOOK** button.

Additional information

Care of your cordless phone

Your phone has been designed to withstand everyday use. To avoid extensive damage:

- Avoid dropping your phone.
- Avoid subjecting your phone to extremes in temperature.
- Do not use solvents or polishes to clean your phone. Wipe over with a damp antistatic cloth.
- Do not attempt to open your phone.

Technical data

Cordless phone

- Housing: shockproof, antistatic ABS.
- Dimensions (mm): 54 x 151 x 30 (WxHxD).
- Weight: approx. 180g.

Charger unit

- Housing: shockproof, antistatic ABS.
- Dimensions (mm): 53 x 87 x 119 (WxHxD).
- Power consumption: max. 1.2 VA.

CE marking

If the CE marking is affixed to this equipment, then it conforms to the European Union Electromagnetic Compatibility Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC).


In case of difficulty

Message	Possible cause	Do this
KEYBOARD OFF	The keypad is locked	Unlock the keypad
No System 100%	The telephone is no longer within range of the base station The telephone is not registered	Get closer to the base station Register the telephone
Batt. Empty! Batt 0%!	The battery pack is flat	Recharge the battery pack or replace it

If any problems are encountered, please contact your local dealer.

Lucent Technologies

Bell Labs Innovations

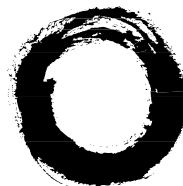

Lucent Technologies BCS
Service Documentation Technique
ZI Saint Lambert • 49412 SAUMUR CEDEX • FRANCE

The information in this document is subject to change without notice. The manufacturer assumes no responsibility for any errors that may appear in this document.

Ce document n'est pas contractuel. Le constructeur se réserve le droit d'apporter toutes les modifications qu'il jugera utiles, sans préavis.

Die in diesem Dokument enthaltenen Informationen können ohne Vorankündigung geändert werden. Der Hersteller übernimmt keinerlei Haftung für fehlerhafte und/oder unvollständige Angaben.

La información de este documento está sujeta a cambios sin previo aviso. El constructor no asume responsabilidad alguna de los errores que pudieran aparecer en este documento.

Alle informatie in deze handleiding kan worden veranderd zonder kennisgeving vooraf. De fabrikant is niet aansprakelijk voor fouten in deze handleiding.